



# LBL-KDB-1

## Kinetic Doorbell



**No Wires & Batteries Required**

### DESCRIPTION

Wireless Kinetic Doorbell that employs micro-energy acquisition technology to provide battery-free installation

### FEATURES & BENEFITS

Wireless & Batteryless

 
Waterproof Transmitter for Outdoor Installation

Pair multiple units together

Choose from 38 melodies with 4 levels of volume, plus a flashing light

True Plug & Play Installation & Operation:

Mount the Transmitter, Plug the Receiver & Ring the Bell

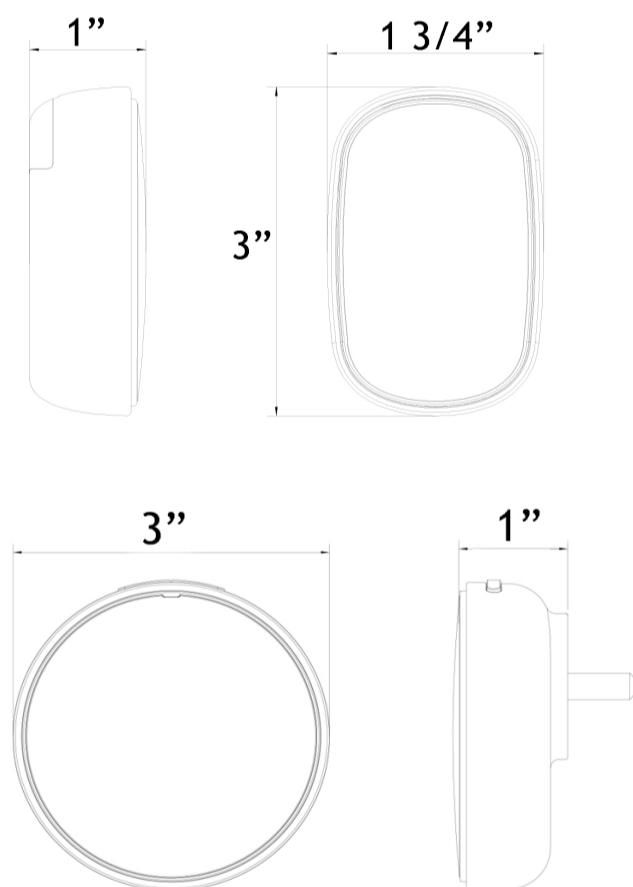

Project: \_\_\_\_\_

Location: \_\_\_\_\_

Qty: \_\_\_\_\_


Notes: \_\_\_\_\_

SPECIFICATION	
Applications	Homes, Multi-Family, Workshops, etc.
Receiver Input Voltage	100 - 240V AC
Energy Used by Receiver	idle 0.1 W, while ringing 0.6 W
Volume Levels	4
Ringtones	38
Pairing Capacity	up to 100 receivers to 1 transmitter
	up to 10 transmitters to 1 receiver
Operation Range	100 feet
Frequency	433 MHz
Operating Temperature	Receiver: -10°C to + 55°C (14°F to 130°F)
	Transmitter: -40°C to + 55°C (-40°F to 130°F)
Approved Location	Receiver: Indoor only
	Transmitter: Outdoor IP67
Certifications	c ETL us, FCC
Warranty	2 Year

### Pairing:

 The Transmitter and Receiver in your package are already paired.

To pair more than one follow the steps below:

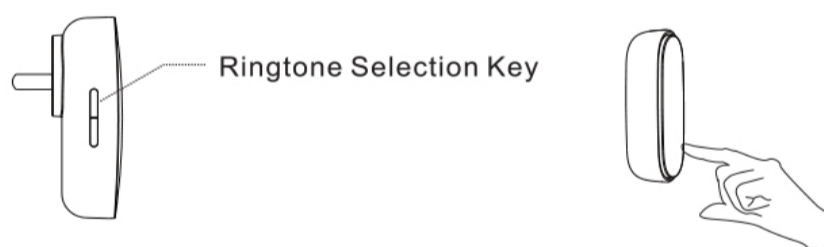

1. Press the Ringtone Selection Key for 3 seconds and release when the indicator light starts blinking
2. Press the Transmitter once. The indicator light on the Receiver will turn off and the pairing is complete

### Deleting Pair:

The pairing will be deleted by pressing the Ringtone Selection Key for 10 seconds until the indicator light stops blinking and is constantly on

### Silent Mode:

To activate Silent Mode, press the Ringtone Selection Key for 8 seconds and release when the indicator light stops blinking and is constantly on

To deactivate Silent Mode: repeat the above steps

### ORDERING GUIDE

Set or Transmitter and Receiver	<b>LBL-KDB-1</b>
Transmitter Only	<b>LBL-KDB-T1</b>
Receiver Only	<b>LBL-KDB-R1</b>

